

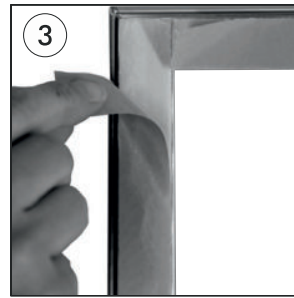
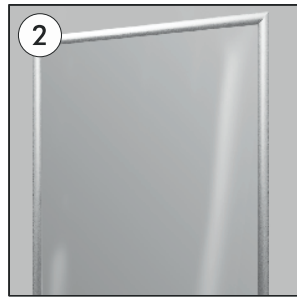



Stick the frame with the double-sided adhesive tape to the inner side of the clean window pane.

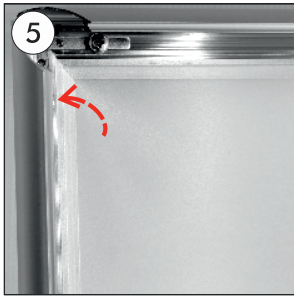

Remove the protective film from the adhesive tape on the backing frame.
Stick the backing frame (without snap function) to the outer side of the window pane using the other frame as a guide.

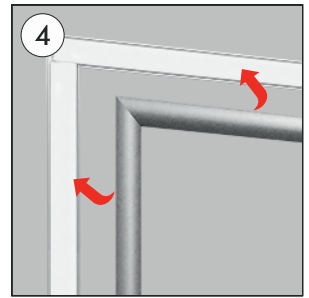

Open the profiles in the direction of the arrow.

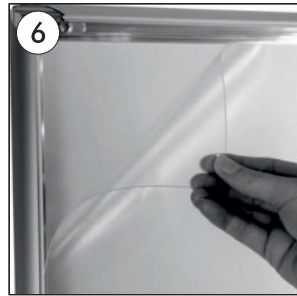

Remove the anti-reflective cover sheet.



Insert the posters on both sides and the partition between.



Lay the anti-reflective cover sheet over the poster and close the profiles in the direction of the arrow.

IMPORTANT!

Clean the window pane thoroughly before application.
The surfaces must be smooth, dry, dust and grease free.
We recommend cleaning with alcohol or spirit.

