



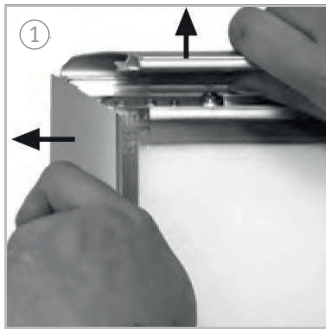

Open all profiles in the direction of the arrows.

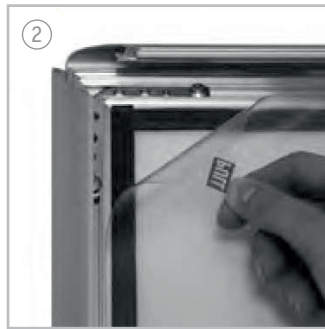

Pull away the protective cover using the "PULL" tab.



Insert poster.



Lay the anti-reflective protective cover over the poster and close the side profiles in the direction of the arrows.



CAUTION!

Please be aware that whether mounted in portrait or landscape format, the water drainage holes must be located at the bottom.

